
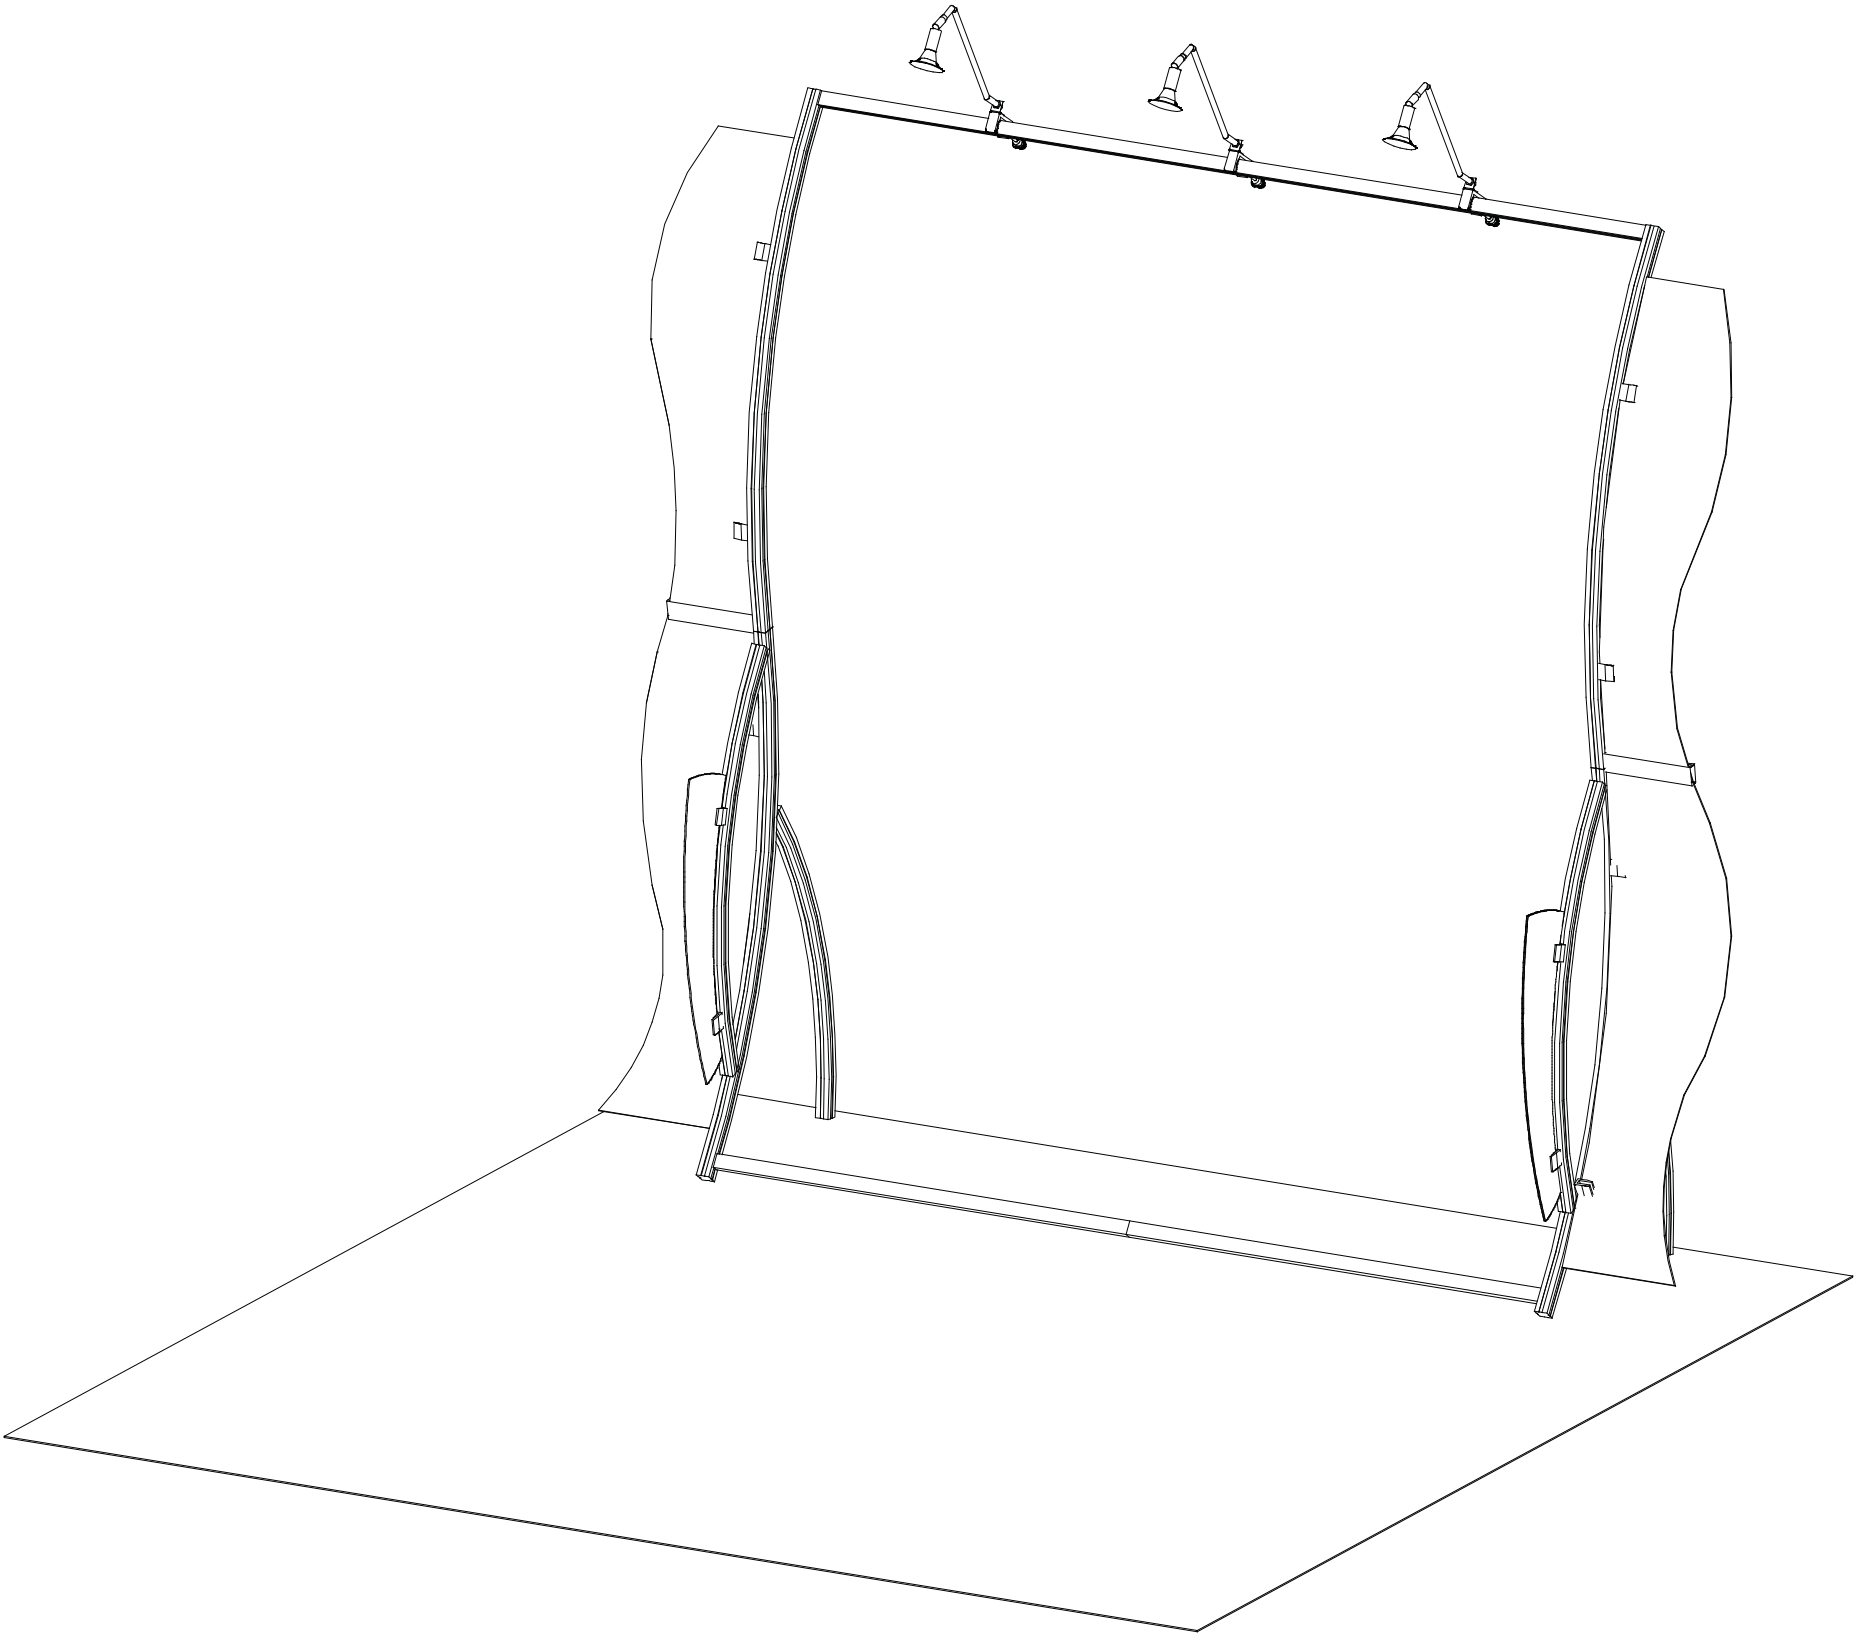


Perfect

10

Hybrid Displays

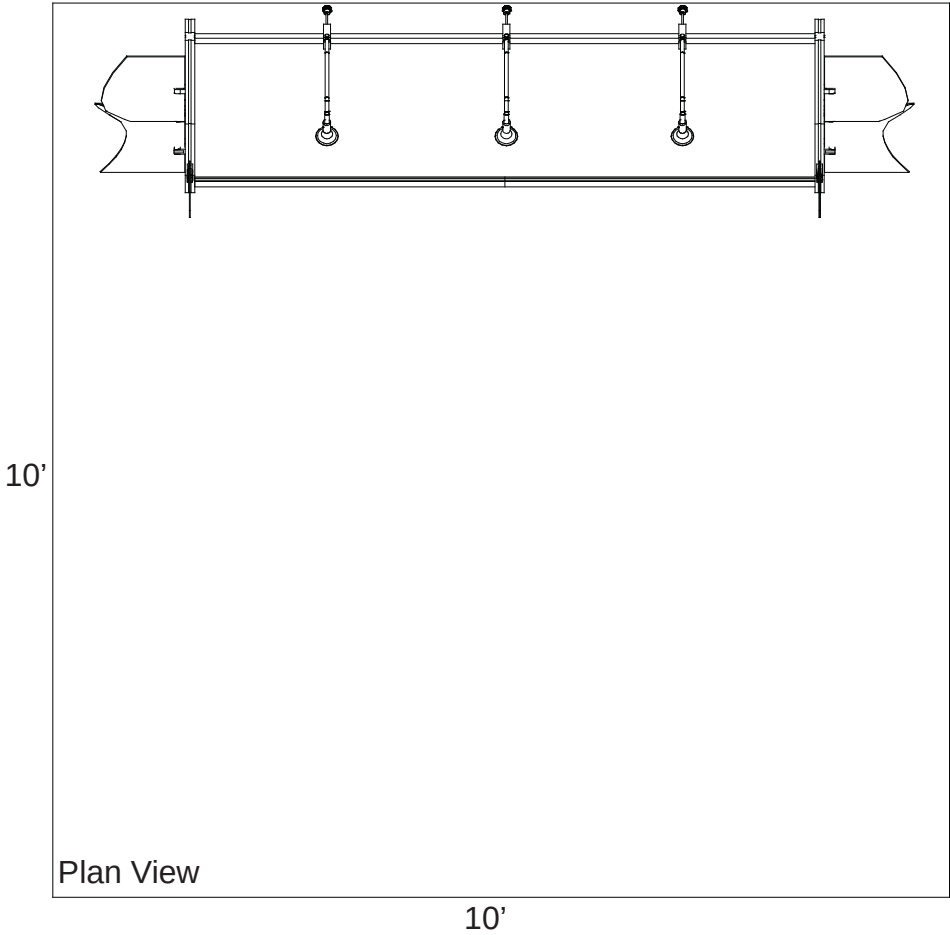

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING

866.652.2100


Part Number	Description
1	Left Leg Assembly w/ A10 Clamps Attached
2	Right Leg Assembly w/ A10 Clamps Attached
3A	Left Upper Curved Vertical w/ A10 Clamps Attached
3	Right Upper Curved Vertical w/ A10 Clamps Attached
4	83"w Horizontal w/ Hinge Facing UP
5	83"w Horizontal w/ Hinge Facing DOWN

Step 1:


NOTE: Can be assembled either face down on floor then lifted upright or upright as shown in drawings.

- A) Connect vertical leg assemblies [1 and 2] together by connecting horizontal extrusions [4] between assemblies tightening BLACK knobs on backside of extrusion making sure Velcro faces toward BACK and placing it about one inch up from bottom and tightening.
- B) Connect vertical extrusions [3 and 3A] to leg assemblies [1 and 2] using vertical connection bar as shown.
- C) Connect upper horizontal extrusion [5] between verticals [3 and 3A] placing it about one inch down from top.

NOTE: Make sure the lock is flush with extrusion before tightening. If lock will not fully engage, gently rock lock and extrusion while turning knob until lock fully opens.

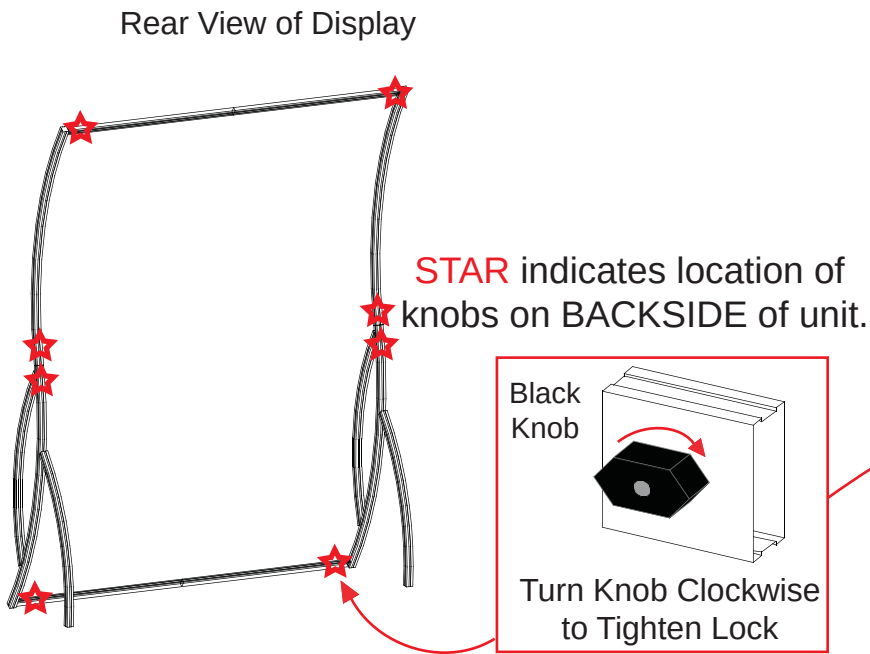

Step 1

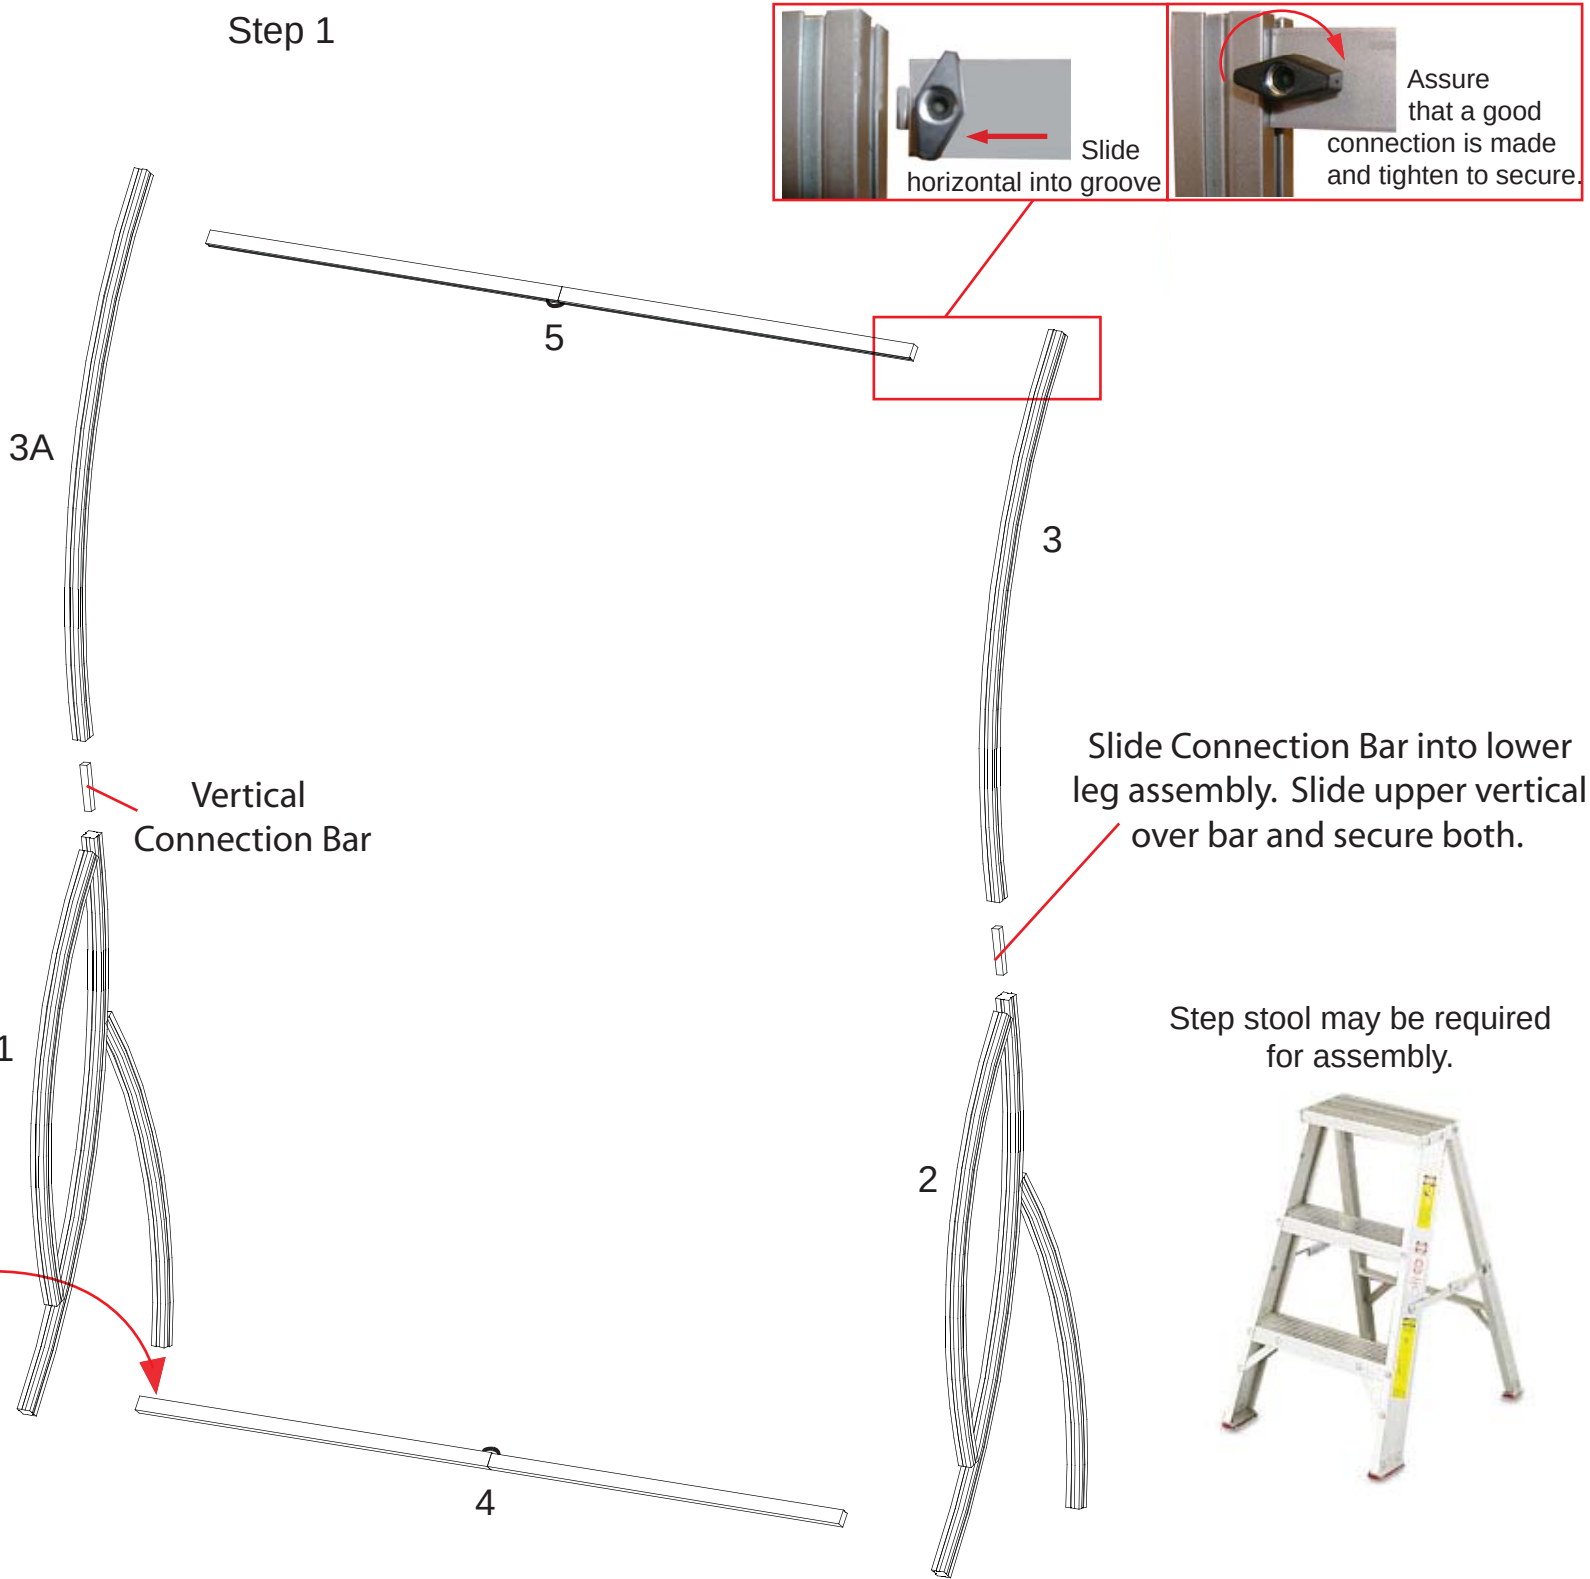


WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING


866.652.2100



Attach decorative wing and blades to A10's attached to Backwall as shown.

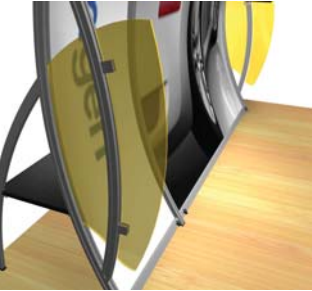

*Decorative Blade Attachment
(if accidentally removed)*
Slide A10 Clamp into groove of square extrusion.

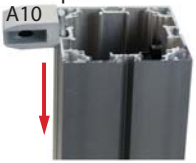

When desired location is found, tighten set screw to secure.



Set-Screw

Tighten black plastic set screw to secure Wing in place.



Black Plastic Set-screw


Hex Key Tool



(if necessary)

Flathead Screwdriver



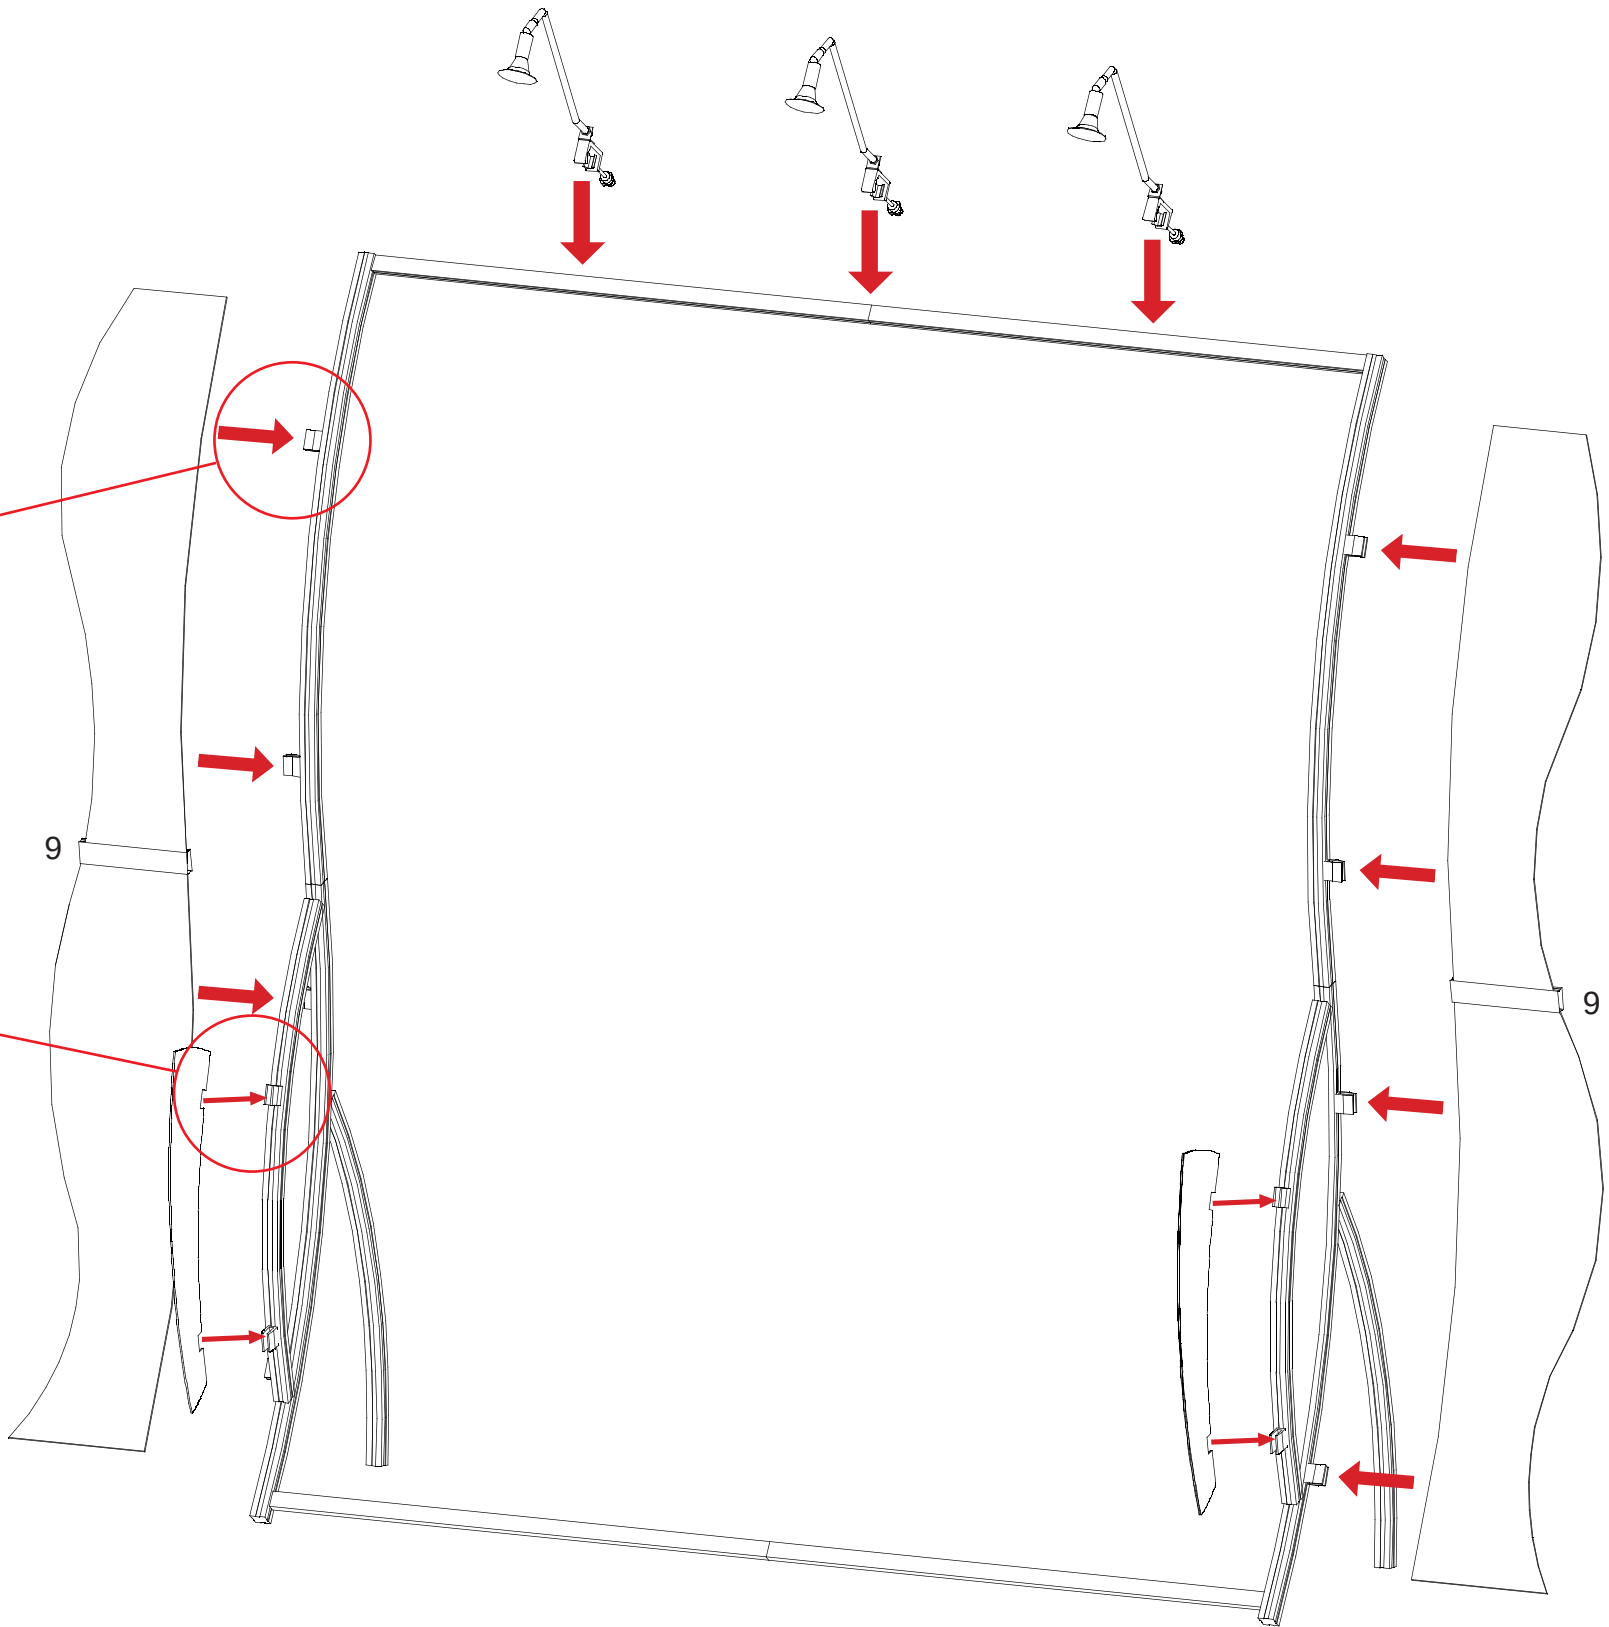

WHEN DISASSEMBLING TIGHTEN ALL KNOBS TO PREVENT LOSS DURING SHIPPING